 


Configuration Switch settings for Stewart FilmScreen Models (Version 4) 4/10/12

DIP Switch	
	<p>The switch is an 8 position for selecting up to 256 codes . Switch position 1 is most significant, position 8 is least significant. Eg A code of 05 would be switch 6 & 8 on all others off In the table below a ● signifies on</p>
Motor	<p>Direction as seen from the end (viewing the cable entry) along the shaft is illustrated by a ↻(Clockwise) or a ↺ (Counter-clockwise) when the screen / mask up button is depressed. Motor direction at power up or home.</p>

BRIC Gold Version 4.20

	Switches								Description	Motor A		Motor B		Motor C		Tension cycle	Remote / Keypad * button
	1	2	3	4	5	6	7	8		Direction	Initialize	Direction	Initialize	Direction	Initialize		
0									Test Mode								
02						●		02	BEMVV	↻	UP↻	↻	UP↻	↻	UP↻	No	Toggle Chan C
03						●	●	03	ATBEMHV Master	↻	UP↻	↻	UP↻	Door		Yes	Retract / Home
04						●		04	EMHV	↻	UP↻	↻	UP↻	↻	UP↻	Yes	Toggle Chan C
05						●	●	05	EMH2V - Master	↻	UP↻	↻	DOWN↻			Yes	Toggle M/S
06						●	●	06	EMH2V - Slave	↻	LEFT↻	↻	RIGHT↻			NO	Retract / Home
07						●	●	07	EMH, EMHC *****	↻	UP↻	↻	UP↻			Yes	Retract / Home
08						●		08	EMSNH	↻	UP↻	↻	DOWN↻			No	STOP
09						●	●	09	Dual Masking EMHV	↻	UP↻	↻	UP↻	↻	UP↻	Yes	Toggle Chan C
10						●	●	0A	4WSN	↻	UP↻	↻	DOWN↻	↻	UP↻	No	Toggle Chan C
11						●	●	0B	8 Way Slave	↻	LEFT↻	↻	RIGHT↻			No	Stop
12						●	●	0C	8 Way Master	↻	UP↻	↻	DOWN↻			No	Toggle M/S
13						●	●	0D	Directors Master	↻	UP↻	↻	DOWN↻			No	Toggle M/S
14						●	●	0E	Directors Slave	↻	LEFT↻	↻	RIGHT↻			No	Stop
15						●	●	0F	ABTEMH	↻	UP↻	↻	UP↻	Door		Yes	Retract / Home
16						●		10	EMSNJ	↻	UP↻	↻	DOWN↻			No	Stop
17						●	●	11	4WSNJ	↻	UP↻	↻	DOWN↻	↻	UP↻	No	Toggle Chan C
18						●	●	12	EMHVRR	↻	UP↻	↻	UP↻	↻	UP↻	Yes	Toggle Chan C

	Switches									Description	Motor A		Motor B		Motor C		Tension cycle	Remote / Keypad * button
	1	2	3	4	5	6	7	8			Direction	Initialize	Direction	Initialize	Direction	Initialize		
19				●			●	●	13	ABEMHV2 Master	↻	UP↻	↻	UP↻	Door		Yes	Retract / Home
20				●		●			14	Jumbo DC Master	↻	UP↻	↻	DOWN↻			No	Toggle M/S
21				●		●	●		15	Jumbo DC Slave	↻	LEFT↻	↻	RIGHT↻			No	Stop
22				●		●	●		16	? Master	↻	UP↻	↻	UP↻			Yes	Retract / Home
23				●		●	●	●	17	ABEM2H	↻	UP↻	↻	UP↻	↻	UP↻	No	Toggle Chan C
24				●	●				18	EMHV3	↻	LEFT↻	↻	RIGHT↻	↻	UP↻	No	Toggle Chan C
25				●	●			●	19	EMH2V – Slave R2	↻	UP↻	↻	UP↻			No	Retract / Home
26				●	●			●	1A		↻	UP↻	↻	UP↻			Yes	Retract / Home
27				●	●			●	1B		↻	LEFT↻	↻	RIGHT↻	↻	UP↻	No	Toggle Chan C